Manualslib.com - The Global Manuals Library

JVC LT-32A70BJ INSTRUCTIONS MANUAL

Table of Contents

Table of Contents
Warning
Names of all the parts
Basic connections
Initial settings
Editing channels
Connecting external devices
Enjoying your new TV
Watching TV
Viewing teletext
Watching videos / DVDs
Useful functions
Advanced picture adjustment
Customising your TV
Troubleshooting
Technical information
ACH/CCB List
Specifications
Other ManualsLib Projects

JVC

LT-32A70BJ/ LT-32A70SJ
LT-26A70BJ/ LT-26A70SJ

WIDE LCD PANEL TV INSTRUCTIONS

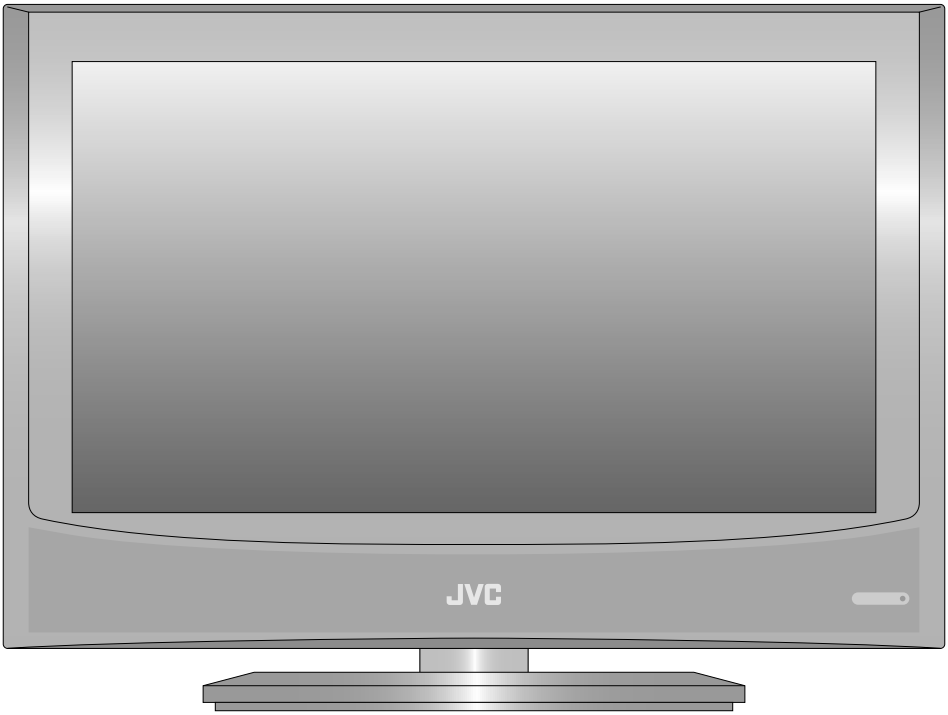

HD ready

HDMI HIGH-DEFINITION MULTIMEDIA INTERFACE

T-V LINK

InteriArt

LCT2174-001B-U

Dear Customer,

This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.

European representative of Victor Company of Japan, Limited is:
JVC Manufacturing U.K. Limited
2 Glenburn Road, College Milton Industrial Estate, East Kilbride G74 5BA
United Kingdom

Information for Users on Disposal of Old Equipment

ENGLISH

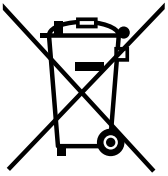

Attention:
This symbol is only valid in the European Union.

[European Union]

This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling of electrical and electronic equipment for proper treatment, recovery and recycling in accordance with your national legislation.

By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

(Business users)
If you wish to dispose of this product, please visit our web page www.jvc-europe.com to obtain information about the take-back of the product.

[Other Countries outside the European Union]
If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.

Expanding the world of

beautiful images

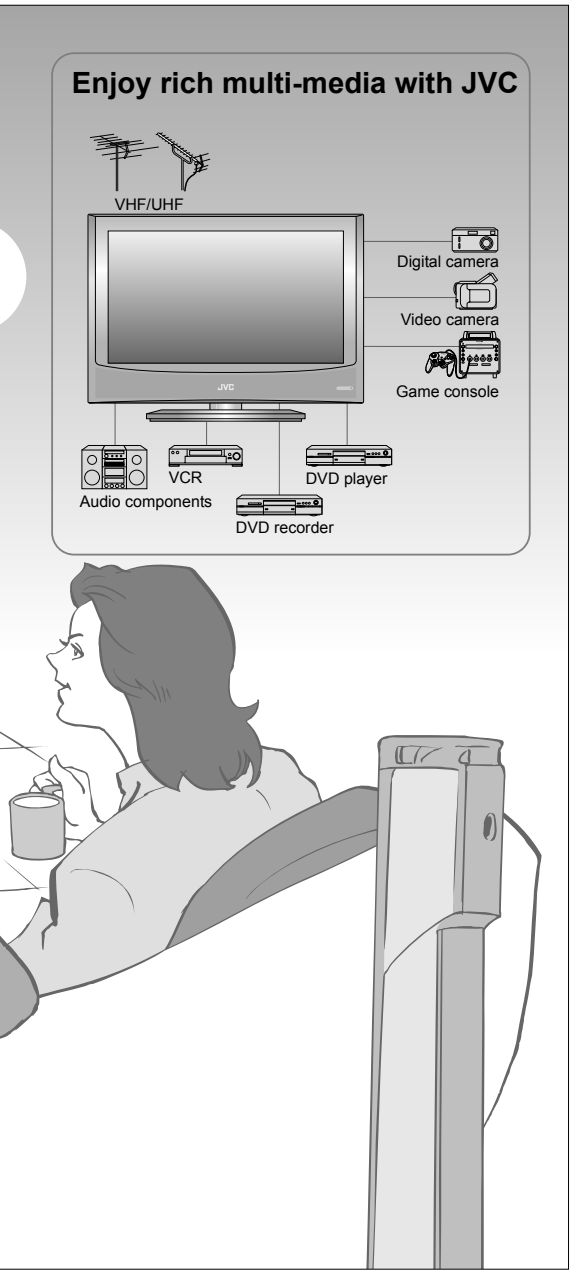

Contents

First things first!
- Warning 3

Getting started
- Names of all the parts 5
- Basic connections 7
- Initial settings 9
- Editing channels 11
  - Registering channels
- Connecting external devices 13

Let's try it out
- Enjoying your new TV! 15
  - TV / Teletext / Video / etc.
- Watching TV 17
- Viewing teletext 19
- Watching videos / DVDs 21

Try the advanced features
- Useful functions 23
  - "SLEEP TIMER" / "CHILD LOCK"
- Advanced picture adjustment 24
  - Reduce noise
  - Set the aspect ratio, etc.

Just the way you like it
- Customising your TV 25

When you have trouble
- Troubleshooting 27
- Technical information 30
- "CH/CC" List 31
- Specifications 32

Warning

Please follow all the guidelines below

Follow this manual regarding setup!

- Connect only to a 220 - 240 V, 50 Hz AC outlet.

Do not allow the TV to fall!

- Do not rest your elbows on, or allow children to hang from the TV.
  There is a risk that the TV will fall and cause injuries.

Make enough room for inserting and removing the power plug!

Place the TV as close to the outlet as possible!

- The main power supply for this TV is controlled by inserting or removing the power plug.

Never cut or damage the power cord!

- If the AC plug is not the right shape, or the power cord is not long enough, use an appropriate plug adapter or extension cable. (Consult your retailer.)

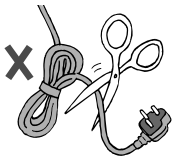

- If you have cut or damaged the power cord.
  ➡ “Technical information” (P. 30)
- To change the fuse in UK plugs
  ➡ “Technical information” (P. 30)

Never try to repair the TV yourself!

➡ If the problem cannot be solved in “Troubleshooting” (P. 27), unplug the power cord and contact your retailer.

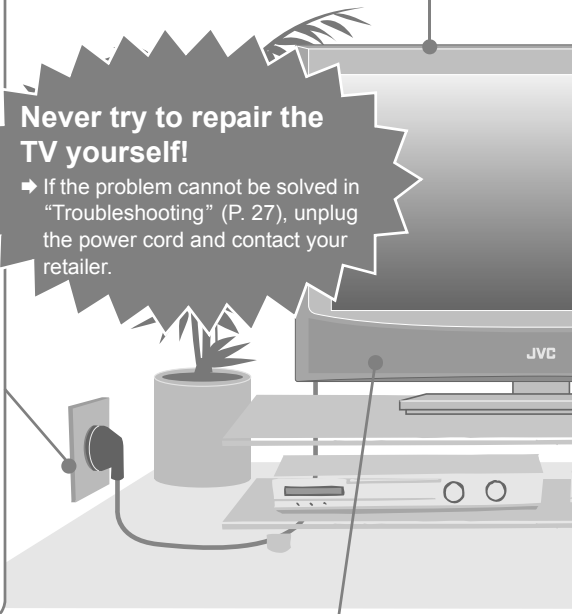

Unplug the power cord when going out!

- The power buttons on the remote control and the TV unit cannot completely turn off the TV. (Make appropriate arrangements for bedridden people.)

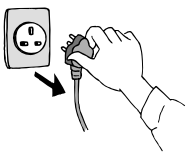

When attaching the TV to the wall, use the optional JVC wall mounting unit!

- Consult a qualified technician.
- See the included manual on mounting procedures.
- JVC assumes no responsibility for damage due to improper mounting.

■ For more details on installation, usage and safety ➡ Consult your retailer

On disposal of the TV!

- Follow the instruction in “Information for Users on Disposal of Old Equipment” (P. I).

Never place anything on the TV!

- Placing liquids, naked flames, cloths, paper, etc. on the TV may cause a fire.

Never expose to rain or moisture!

- To prevent fire or electric shock, never allow liquids to enter the unit.

Never insert objects into the cabinet openings!

- It may cause a fatal electric shock. Take care when children are near.

If the TV is damaged or behaving strangely, stop using it at once!

➡ Unplug the power cord and contact your retailer.

Never listen to headphones at high volume!

- It may damage your hearing.

Never dismantle the rear panel!

- It may cause an electric shock.

Never obstruct the ventilation holes!

- It may cause overheating or a fire.

Handle LCD panel with care!

- Use a soft, dry cloth when cleaning.

Hold the TV so as not to scratch the screen!

- Do not touch the screen when carrying the TV.

Do not carry the TV on your own!

- In order to prevent accidents, ensure that the TV is carried by two or more people.

Names of all the parts

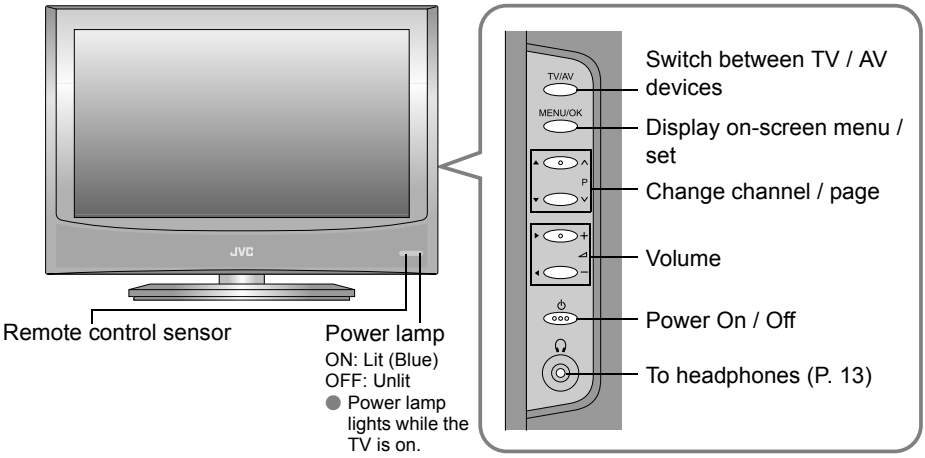

- To attach the stand, refer to the included sheet.
- Connecting terminals on the back of the TV ➡ Connecting external devices (P. 13)

Check accessories

Remote control
(RM-C1816S)

“AA/R06” Batteries
(For confirming the TV works)

Insert the batteries

Use two “AA/R06” dry cell batteries. Insert the batteries from the ⊖ end, making sure the ⊕ and ⊖ polarities are correct.

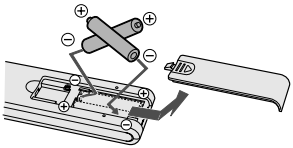

Mute

Power On / Off

Switch between “VCR / TV / DVD” (P. 21)

Change channel / page

Channel information (P. 17)

Watch video, etc. (P. 21)

Colour buttons

Return to TV

Display on-screen menu (P. 25)

Select and confirm settings in menus

To teletext (P. 19)

To the previous screen (P. 25)

Change channel / page

Volume

The coloured buttons can perform different functions according to the situation.

■ When viewing teletext (P. 19)

Follow on-screen instructions.

■ Other uses

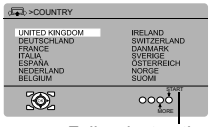

Follow instructions in on-screen guides.

■ When watching TV / Video



Turn on “3D SOUND” (P. 17)

Change the aspect ratio (P. 17)

■ When viewing teletext (P. 19)

Hold the current page

Bookmark pages

Reveal hidden pages

Enlarge the text

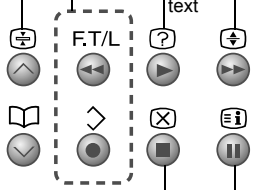

Switch briefly between teletext and TV

To index page

Basic connections

Please read the user manuals of each device carefully before setup.
It is necessary to connect an aerial to watch TV.

■ Connect with other devices ➡ “Connecting external devices” (P. 13)

Connect the aerial

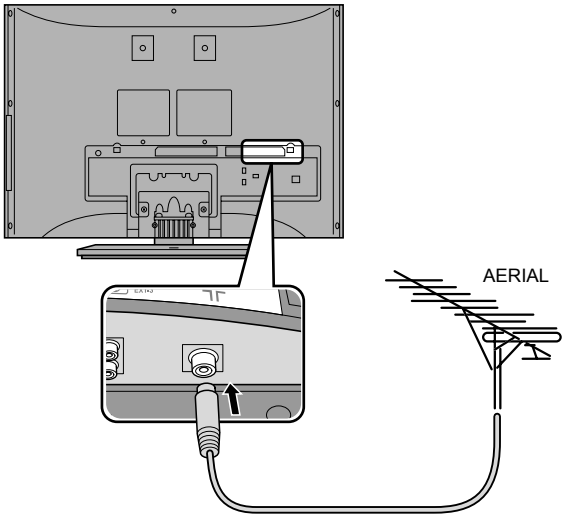

● After all the connections have been made, insert the plug into an AC outlet.

Care when setting

■ Power requirements

● Connect the power cord only to a 220 - 240 V, 50 Hz AC outlet.

■ When attaching the TV to the wall, use the optional JVC wall mounting unit

● Consult a qualified technician.
● See the included manual on mounting procedures.
● JVC assumes no responsibility for damage due to improper mounting.
● 200 mm x 200 mm mount which conforms to VESA standards.

■ Installation requirements

● To avoid overheating, ensure the unit has ample room.

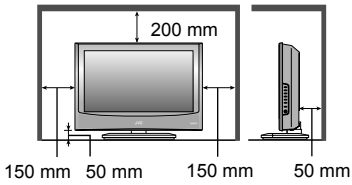

Connect a VCR / DVD recorder

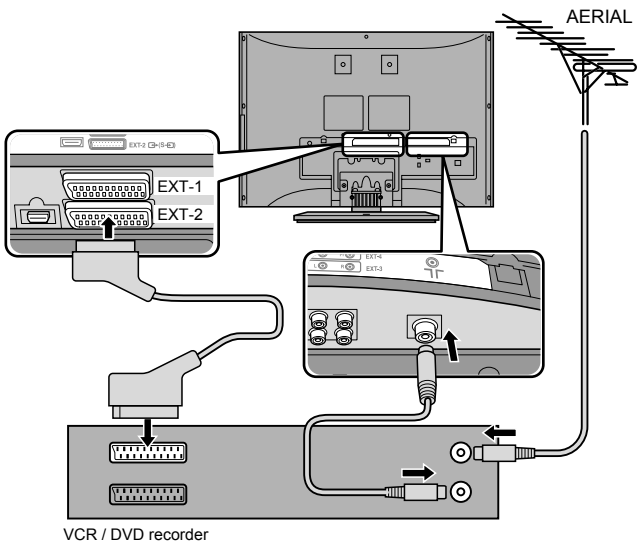

- After all the connections have been made, insert the plug into an AC outlet.
- Connect “T-V LINK” compatible recording device to “EXT-2”.
- “T-V LINK” ➡ “What is “T-V LINK”?” (P. 9)

Initial settings

Set the menu language, installation location and automatically register the TV channels.
These channels can be edited later in “Editing channels” (P. 11).
(Channel data on the TV can be sent to a connected recording device that is compatible with “T-V LINK”.)

■ To the previous screen ➡ BACK

■ Exit ➡ TV

■ If the “JVC” logo does not appear or if you wish to make changes later
➡ “LANGUAGE” and “AUTO PROGRAM” (P. 26)

What is “T-V LINK”?

Connecting the TV to a “T-V LINK” compatible device allows:

- Channels on the TV to be instantly registered on the device.
- The “DIRECT REC” function to be used.
➡ “Technical information” (P. 30)

■ “T-V LINK” variations

“T-V LINK”(JVC), “Q-LINK”(Panasonic), “Megalogic”(Grundig), “Data Logic”(Metz), “SMARTLINK”(Sony), “Easy Link”(Philips)

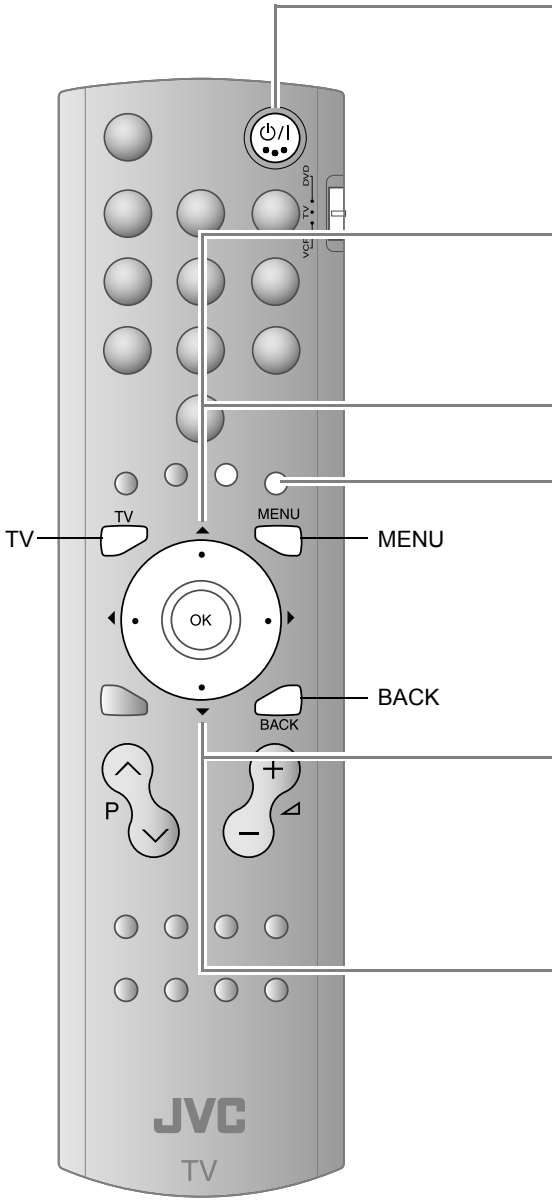

1 Begin

- Shown only when powering on for the first time.
- The power on the unit can also be used.

■ The remote control doesn't work



- Confirm the mode is set to "TV".

2 Select a language

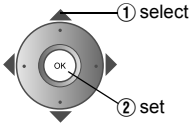

3 Select the country of installation



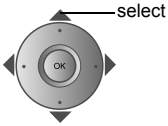

- For the next page ➡ " " (Yellow)

4 Automatically register channels

(blue)



5 Check what was registered

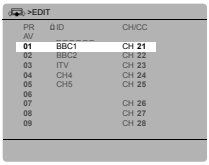

■ Edit channels

➡ ❹ in "Editing channels" (P. 11)

■ Confirm

6 Finish

■ When using "T-V LINK"

- If "FEATURE NOT AVAILABLE" appears:
  - ➡ Is the "T-V LINK" compatible device connected to "EXT-2"?
  - ➡ Is the device turned on?

■ When not using "T-V LINK"

Editing channels

Edit the channels registered with “AUTO PROGRAM” in “Initial settings” (P. 9).

When coming from “Initial settings” (P. 9), skip to ❹.

1 Display the menu bar

MENU

2 Select “SET UP”

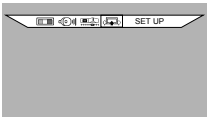

3 Select “EDIT/MANUAL”

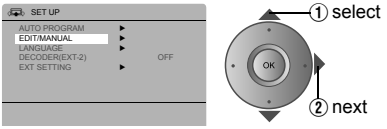

4 Select a row

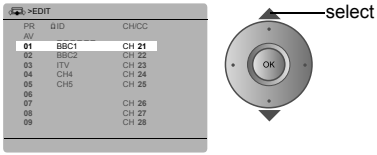

■ To the previous screen

➡ BACK

5 Edit

6 Confirm settings

■ Exit

➡ MENU

7 Finish

■ When using “T-V LINK”

■ When not using “T-V LINK”

● If “FEATURE NOT AVAILABLE” appears:
  ➡ Is the “T-V LINK” compatible device connected to “EXT-2”?
  ➡ Is the device turned on?

● “T-V LINK” ➡ (P. 9)

Move a channel’s position
MOVE

Edit a channel name
ID

Insert a channel
INSERT

Delete a channel
DELETE

Register a new channel
MANUAL

①Begin ②Select a destination ③Finish

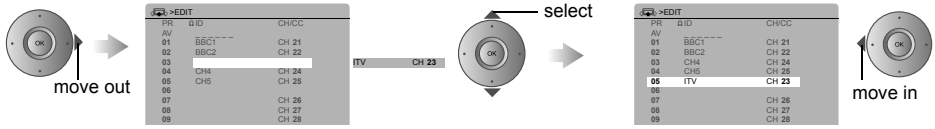

①Begin

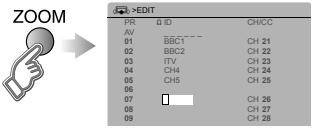

②Enter a channel name

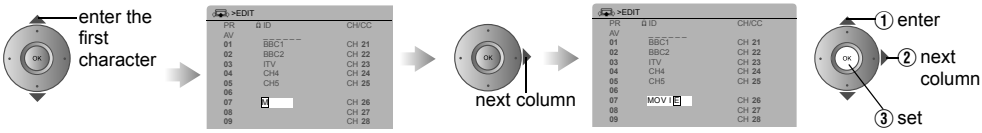

①Begin ②Enter a number

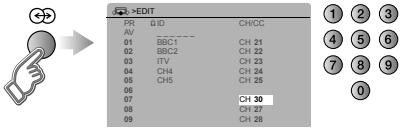

● Receives the broadcast signal.

● “CH/CC” List ➡ (P. 31)
● In Ireland, select CH/CC with ▲▼.

①Delete



①Begin ②Beginning channel search

From high frequencies / From low frequencies



● Auto-search begins, and the nearest frequency is imported.
➡ Repeat the previous steps until the desired channel is displayed

③Set



■ Adjust



(yellow)(blue)
● Picture fine tuning ➡ ◯ / ◯

● Sound fine tuning ➡ select a system

Connecting external devices

You can connect many different devices to the rear panel of the TV.
Please read the user manuals of each device before setting up.
(Connecting cables are not supplied with this TV.)

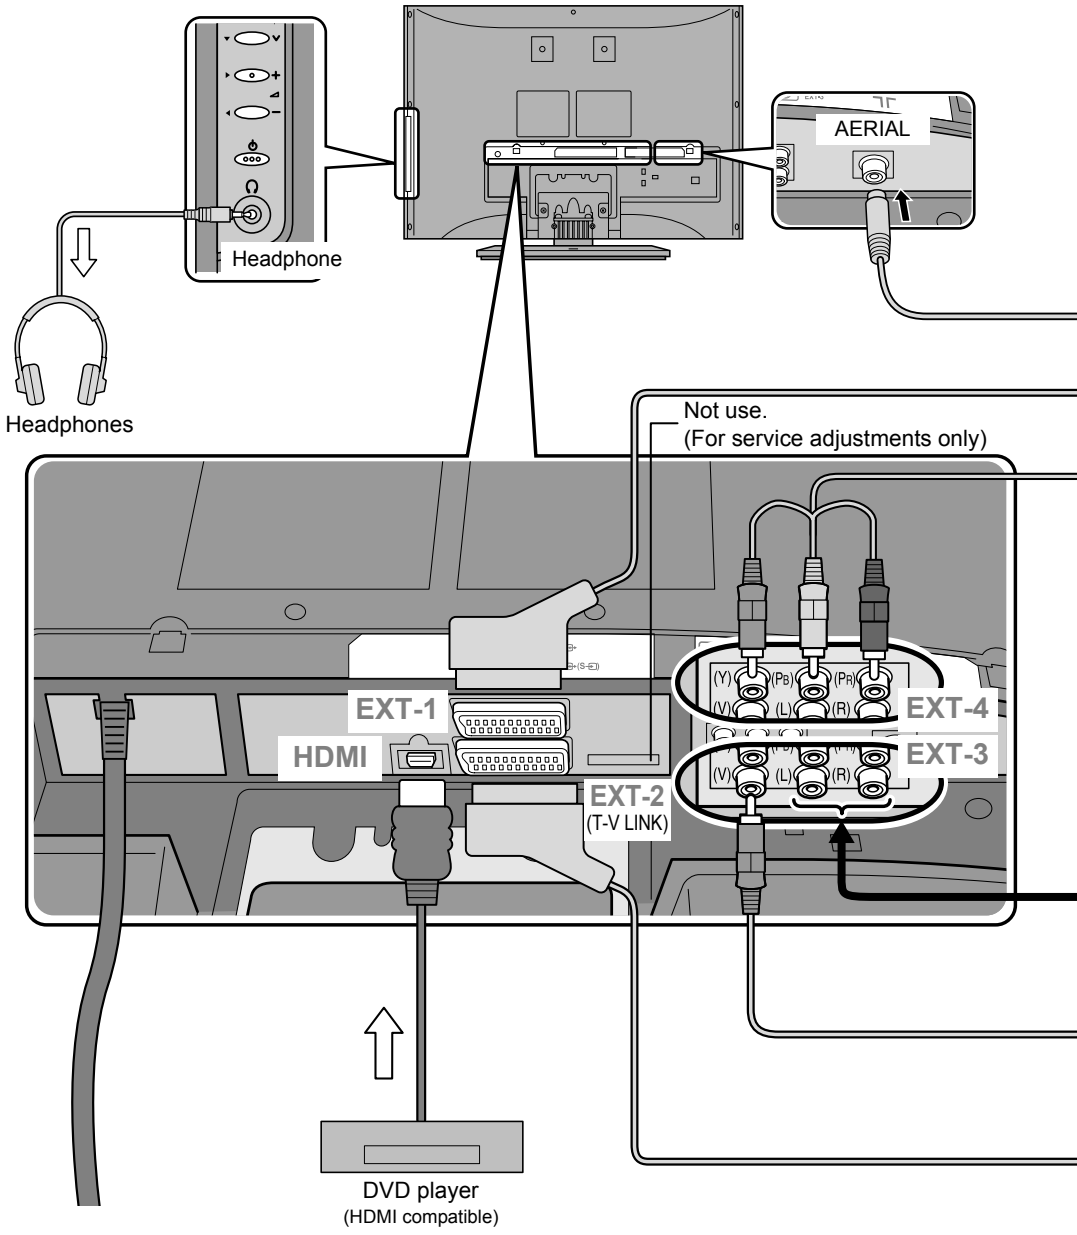

VCR / DVD / other devices

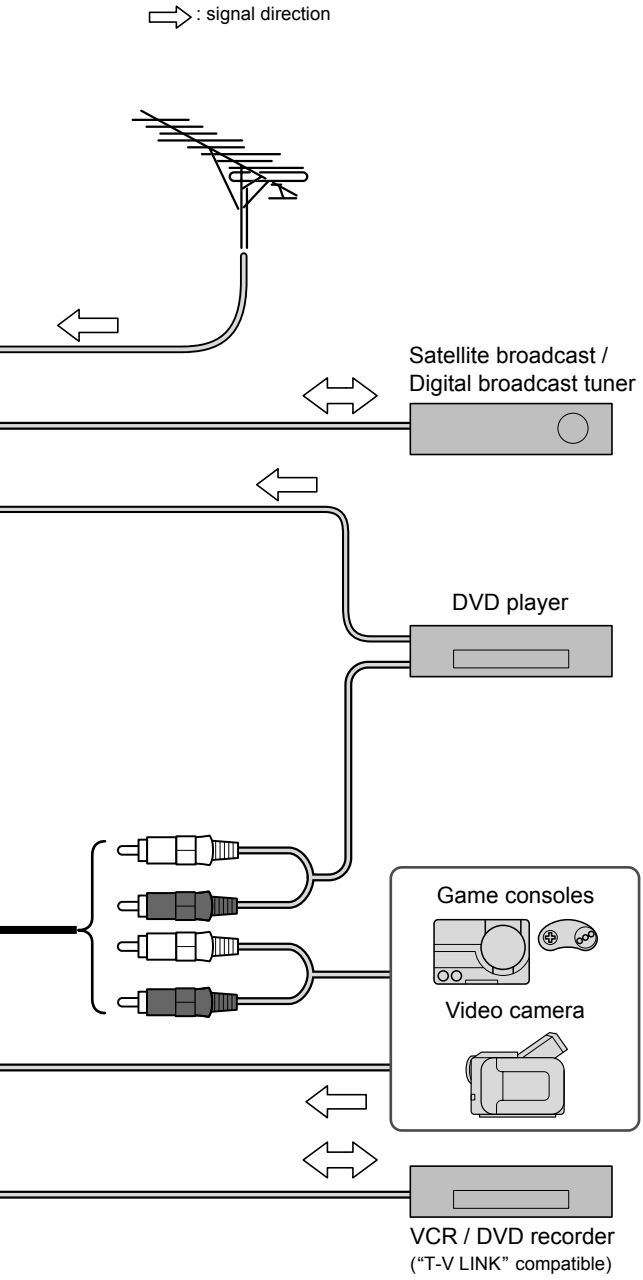

■Connect "DVI" devices
➡ (P. 30)

■"T-V LINK" ➡ (P. 9)

EXT-1

Watching videos

Output ⬆	Input ⬇
•Composite signal •Sound L / R	•Composite signal / RGB •Sound L / R

EXT-2

Dubbing videos using "T-V LINK"

Output ⬆	Input ⬇
•Composite signal •Sound L / R	•Composite signal / RGB / S-VIDEO •Sound L / R
•T-V LINK	

- Use S-VIDEO ➡ "S-IN" (P. 22)
- Select dubbing sources ➡ "DUBBING" (P. 22)
- Connect a decoder ➡ "DECODER(EXT-2)" (P. 26)

EXT-3

Watching videos

Output ⬆	Input ⬇
	•Composite signal •Sound L / R

EXT-4

Watching DVDs

Output ⬆	Input ⬇
	•Component signal (P. 32) •Sound L / R (Common with EXT-3)

HDMI

Connecting HDMI devices

Output ⬆	Input ⬇
	•HDMI signal (P. 32)

Enjoying your new TV!

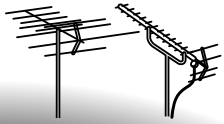

Watching TV

PAGE 17

- View channel information
- Change the aspect ratio
- Enjoy “3D SOUND”
- Register your favourite channels

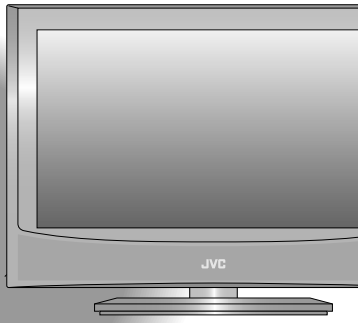

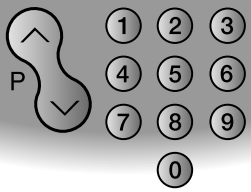

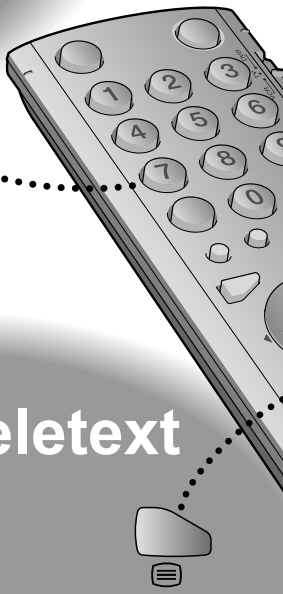



TV mode

Text mode

Viewing teletext

PAGE 19

- Enlarge the text
- To the index page
- Hold the current page
- Switch briefly between teletext and TV
- Bookmark your favourite pages
- Reveal hidden pages

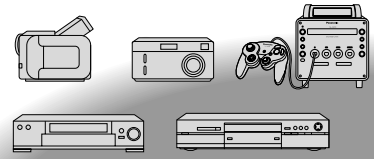

PAGE 21

Watching videos / DVDs

- Watch high quality video (S-VIDEO)
- Name connected devices
- Dub videos

AV

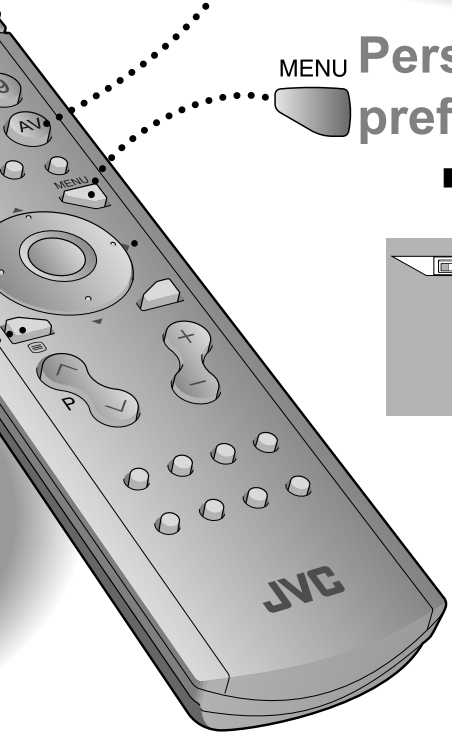

MENU **Personal preferences**

PAGE 25

- Adjust the picture
- Adjust the sound

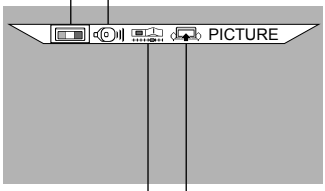

- Basic settings
  (channel settings, etc.)
- Advanced settings
  (SLEEP TIMER / CHILD LOCK, etc.)

Watching TV

■ Mute

■ Volume

1 Set to “TV”

2 Power on

The blue power lamp on the TV lights

● Press again to turn the screen off and put the TV into standby mode.

3 Select a channel

E.g.

1 2 3
4 5 6
7 8 9
0

1: 0 ➡ 1

15: 1 ➡ 5

■ Move up or down a channel



■ Switch between mono / stereo / bilingual broadcasting

➡ “STEREO/Ⅰ · Ⅱ” (P. 26)

Note

● To completely turn off the TV, unplug the AC plug.

Basic operations using the side buttons

1 Power on

2 Change the channel

■ Volume

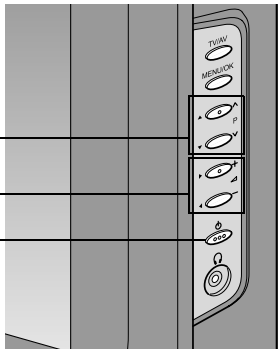

Channel information and clock

INFORMATION

Change the aspect ratio

ZOOM

Enjoy ambient sound

3D SOUND

Register a channel to a button

FAVOURITE CHANNEL

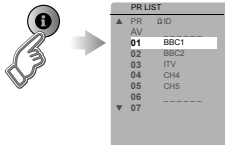

PR LIST
- Channels registered in "Initial settings" will appear here.

Channel information

Time (in case of having viewed teletext)

(No indication)

■ Select a page ➡

■ Select and view a channel ➡ 

ZOOM

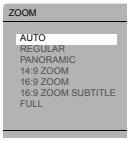

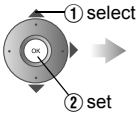

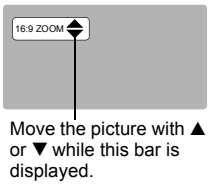

Move the picture with ▲ or ▼ while this bar is displayed.

- When set to "AUTO", the aspect ratio will turn to the ratio obtained from the information the TV received. Without receiving aspect information, it will be the setting in "4:3 AUTO ASPECT" (P. 24)
- Not available in 1080i (1125i) / 720p (750p) signals.



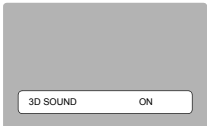

ON : For stereo sound
MONO : For mono sound (emulates a stereo-like sound)
OFF : Turns off "3D SOUND"

While the channel is displayed

Hold down for 3 seconds

Press the number to register it on

① ② ③ ④

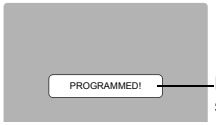

Disappears after a few seconds

■ Recall the favourite channel



Press the number you registered

① ② ③ ④

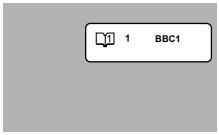

- Customisations (P. 26) to the picture of a favourite channel get saved as well.

■ Check your favourite channels ➡ Press "ⓘ" and confirm that the channels you have registered have a 🕮 beside them

■ Delete a favourite channel

➡ "MENU" ➡ "📺🕮" ("FEATURES") ➡ "FAVOURITE SETTING"



delete (blue)



Viewing teletext

This TV can display TV broadcasts and teletext on the same channel in two windows.

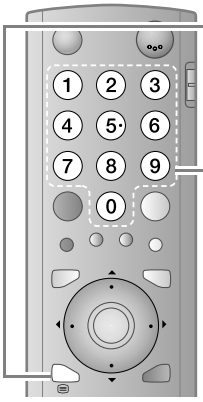

1

2 Enter a teletext page

1 2 3
4 5 6
7 8 9
0

■ Move up or down a page

P — up / down

When watching TV

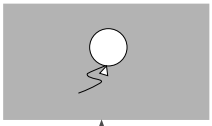

TEXT

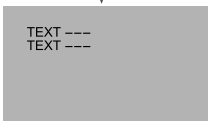

View sub-pages

Sub-page

Display sub-pages



■ Release ➡ Press "📖" again

■ Move up or down a page

ZOOM down / up (yellow) (blue)

Bookmark your favourite page

LIST MODE

1 Display your favourites list

F.T/L

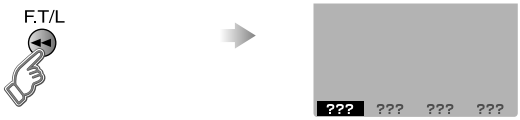

2 Select a coloured button to save your page to

3 Enter the number of the page to save



1 2 3
4 5 6
7 8 9
0

4 Save

■ Recall your favourite page ➡ Press the coloured button as in step 2

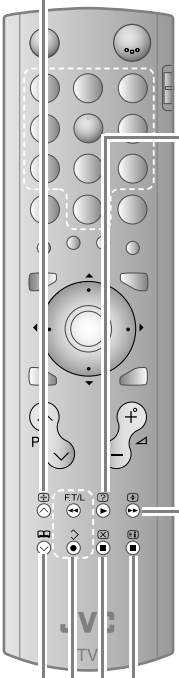

Hold the current page

HOLD

Hold the current page

■ Release ➡ Press “ ” again

Reveal hidden pages

REVEAL

Display hidden information (answers to quizzes, etc.)

1 + 2 =
2 x 3 =

1 + 2 = 3
2 x 3 = 6

Enlarge the text

SIZE

Double the size of the displayed text

TEXT
SIZE

To the index page

INDEX

Returns to page “100” or a previously designated page

Switch briefly from teletext to TV

CANCEL

Leave the current page open, while you switch to watch TV

100
TEXT ----
TEXT ----

● Useful when running a page search.

Watching videos / DVDs

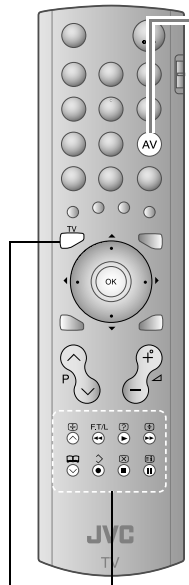

■ To TV Operate the VCR (DVD)

1 Select the video source

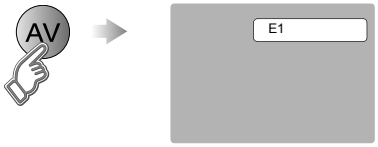

E.g. For EXT-1

● You can also press the “TV/AV” button on the unit to select the video source.

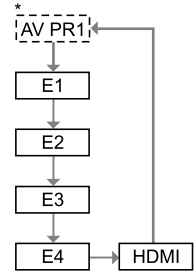

*: Only appears when AV has been registered as a channel.

2 Operate the connected device and play a video

Operate JVC recorders and others devices

1



DVD players

VCR and DVD recorders

2 Turn on the device

3 Select a channel (VCR mode)

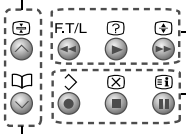

Rewind / Playback / Fast-forward

Record / Stop / Pause

Select a chapter (DVD mode)

■ To record ➡ Hold “ ” and press “ ”

● The remote control code of this unit is “A” or “1”. Confirm the remote control code of your recorder by checking the manual it came with. Change the remote control code of your recorder if necessary.
● Some models of JVC devices cannot be operated with this remote control.

1 Display the menu bar

2 Select “SET UP”

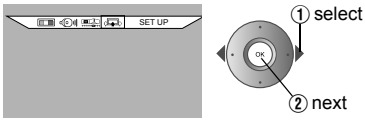

3 Select “EXT SETTING”

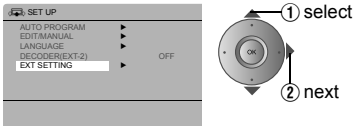

Switch to S-VIDEO input

S-IN

①Select the “EXT-2” connected to S-VIDEO

②Set the S-VIDEO mode

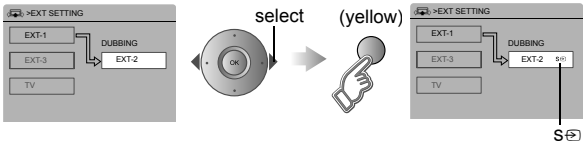

- The device selection display will change from “E2” to “S2”.

■Cancel this mode ➡ Press “●” (yellow) in ② again

Set up dubbing on “EXT-2”

DUBBING

①Select the arrow

②Select the dubbing source

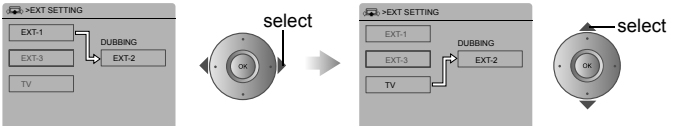

Useful functions

Set a time for the TV to turn itself off

SLEEP TIMER

1 MENU

2



3



4





■ Cancel ➡ Set the time to “0” in step 4

■ Remaining time ➡ You can confirm the remaining time at step 4, after repeating this process.

Stop children from watching specific channels

CHILD LOCK

● After steps 1 and 2 above

3



4



5

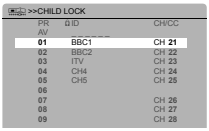

6 (blue)



■ Lock more channels
➡ Repeat steps 5 and 6

7

■ Release a channel ➡ Press “ ” (blue) again in step 6

■ View a locked channel ➡ Use the numerical buttons to enter the channel number. When appears, press “ ” and enter your “ID NO.”. (If you forget your “ID NO.”, check it in step 4.)

Advanced picture adjustment

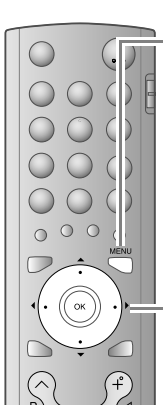

1 Display the menu bar

MENU



2 Select “PICTURE” Select “FEATURES”



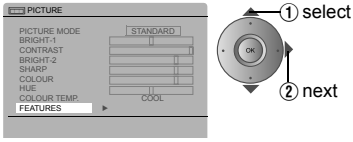

To reduce noise

DIGITAL VNR

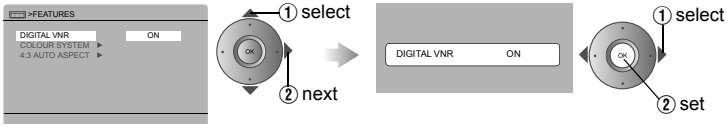

OFF	ON
: Function is turned off	: When noise appears

When there is no colour

COLOUR SYSTEM

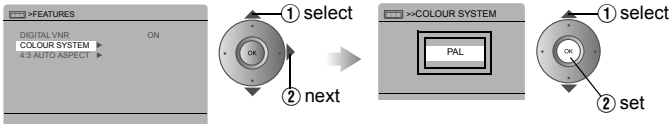

Select the colour system

PAL	NTSC 3.58	NTSC 4.43	AUTO
: Western Europe	: USA 3.58 MHz	: USA 4.43 MHz	: When watching videos, etc.

Set a default aspect ratio

4:3 AUTO ASPECT

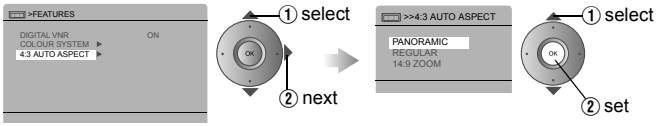

Select a default aspect ratio for AUTO in “ZOOM” (P. 17)

PANORAMIC	REGULAR	14:9 ZOOM
16 : 9	4 : 3	14 : 9

Customising your TV

1 Display the menu bar

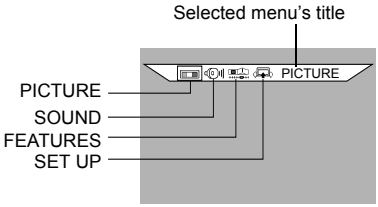

2 Select a menu



3 Select an item

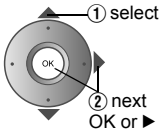

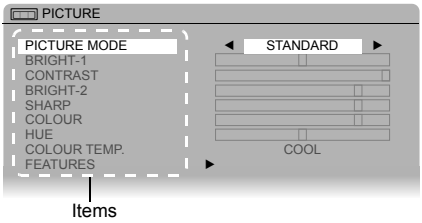

4 Adjust / configure



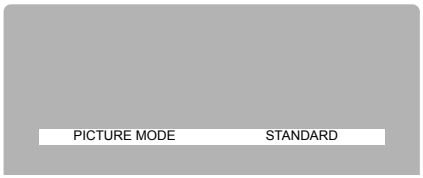

■ When adjusting with the sliding-bar





■ When selecting from presets

◀ STANDARD ▶

The item will change.



● Some items have a sub-menu.

■ To the previous screen

➡ BACK

■ Exit

➡ MENU

● The menu disappears after one minute of inactivity.

Menu	Item	Adjustments / Configurations	
PICTURE	**PICTURE MODE**	Picture mode (BRIGHT / STANDARD / SOFT)	
	BRIGHT-1	Backlight brightness (Darker ⇔ Brighter)	• To reset to default settings (blue) ➡ ●
	CONTRAST	Contrast (Lower ⇔ Higher)	
	BRIGHT-2	Brightness (Darker ⇔ Brighter)	
	SHARP	Sharpness (Softer ⇔ Sharper)	
	COLOUR	Colour (Lighter ⇔ Deeper)	
	HUE (NTSC only)	Tint (Reddish ⇔ Greenish)	
	COLOUR TEMP.	Colour temperature (WARM / NORMAL / COOL)	
	FEATURES	Finer picture adjustments (P. 24)	
SOUND	**STEREO/Ⅰ・Ⅱ**	Mode / Language (○ : Monaural / ○○ : Stereo / Ⅰ : SUB1 / Ⅱ : SUB2)	
	BASS	Low tones (Weaker ⇔ Stronger)	
	TREBLE	High tones (Weaker ⇔ Stronger)	
	BALANCE	Speaker balance (Left Stronger ⇔ Right Stronger)	
	3D SOUND	Ambience level (ON / MONO / OFF)	
FEATURES	**SLEEP TIMER**	Timer for turning off the TV (P. 23)	
	CHILD LOCK	Stops children from watching specific channels (P. 23)	
	APPEARANCE	Format for displaying the channel number (TYPE A / TYPE B)	
	BLUE BACK	Displays a blue screen and mute the sound when the signal is weak or absent (ON / OFF)	
	FAVOURITE SETTING	Clear favourite channel settings (P. 17)	
SET UP	**AUTO PROGRAM**	Select a country, it automatically registers channels (P. 10, 4)	
	EDIT/MANUAL	Change registered channels or add new ones (P. 11)	
	LANGUAGE	Select a language for on-screen menus (P. 10, 2)	
	DECODER(EXT-2)	For when connected to VCR with “T-V LINK” (ON / OFF)	
	EXT SETTING	For use with video players and other devices (P. 22)	

● Other settings
- Change the aspect ratio ➡ “ZOOM” (P. 17)
- Turn on “3D SOUND” ➡ “3D SOUND” (P. 17)

Troubleshooting

Severe noise or snow

- Is the TV connected correctly to the aerial?
- Change the direction of the aerial.
- Is the aerial or its cable damaged?
  ➡ Consult your retailer

Patterns, stripes or noise

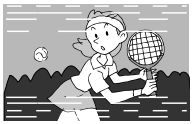

- Is the aerial receiving interference from high-voltage power lines or wireless transmitters?
  ➡ Consult your retailer
- Are connected devices too close to the TV?
  ➡ Insert the minimum distance between the aerial and the cause of interference until no interference

Ghosting

(Doubling of images)

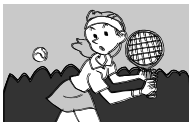

- Are you receiving interference from signals reflected off mountains or buildings?
  ➡ Adjust the direction of your aerial, or change to a good-quality directional aerial

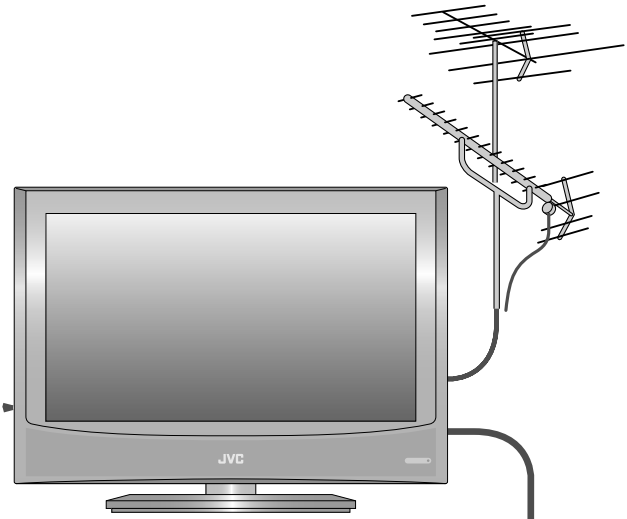

I can't turn it on!

- Is the power cord connected to the AC outlet correctly?

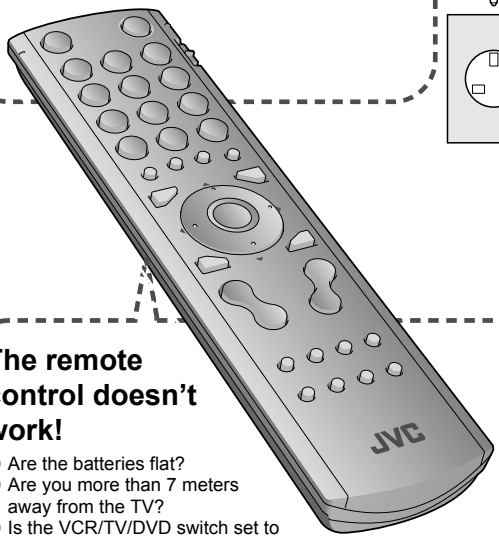

The remote control doesn't work!

- Are the batteries flat?
- Are you more than 7 meters away from the TV?
- Is the VCR/TV/DVD switch set to "TV"?
- When viewing teletext, the TV menu bar does not appear.
- Depending on the stability of the signal, there may be a time lag when changing channels.

	Problem	Actions	Page
Basics	Remote control stops working	● Unplug TV, several minutes later plug it in again.	—
Screen	Aspect ratio changes unintentionally	● Press "ZOOM" to return to your settings.	17
Picture	Poor picture quality	● Unnatural colour >>> Adjust "COLOUR" and "BRIGHT-1".	26
		Check your "COLOUR SYSTEM".	24
		● Noise >>> Set to the following functions.	
		PICTURE MODE: STANDARD	26
		DIGITAL VNR: ON	24
		● Dull picture >>> Set to the following functions.	
		PICTURE MODE: BRIGHT	26
		DIGITAL VNR: OFF	24
	Strange picture when using an external device	● If you connected S-Video output device, check the "S-IN" setting.	22
		● If the top of the image is distorted, check the video signal quality itself.	—
		● If movement appears unnatural when receiving a signal from a DVD player, etc. with 625p (progressive-scanning), change the output setting of the external device to 625i (interlace-scanning).	—
Sound	Poor sound	● Adjust the "BASS" and "TREBLE".	26
		● If receiving a poor signal in "STEREO/Ⅰ・Ⅱ", switch to "Ⓞ" (Mono).	26
		● Change the broadcasting system using "MANUAL".	11

Troubleshooting (Continued)

	Problem	Actions	Page
HDMI	No picture, no sound	● Use the cable marked with HDMI logo. HDMI	—
	No sound	● Check if the device is compliant with HDMI.	—
	Green and distorted screen	● Wait a little for the signal to stabilize when switching the signal format for an HDMI device.	—
Functions	Some functions do not display on the menu	● It is not a malfunction. Some functions (dark background) in the menu do not work depending on the situation.	—
Display	“FEATURE NOT AVAILABLE” appears	● Is the “T-V LINK” compatible device connected to “EXT-2”? ● Is the SCART CABLE “Fully Wired”? ● Is the “T-V LINK” compatible device turned on? After confirming all the conditions above, press “OK” button again.	30 30 —
Screen	Black or white dots appear on the screen	● LCD panels use fine dots (“pixels”) to display images. While more than 99.99% of these pixels function properly, a very small number of pixels may not light, or may light all the time. Please understand that this is not a malfunction.	—
	The shadow of a different image is seen on the screen	● When changing to another image after displaying a still image for a long period of time, the shadow of the previous image remains on the screen. This is not a malfunction, it is known as “temporary image retention”, a phenomenon that is unique to LCD panels. The shadow will disappear after some time.	—

Technical information

What is “T-V LINK”?

“T-V LINK” allows the TV to share information easily with a connected “T-V LINK” compatible device.
By using T-V LINK:

- You can send the channel information programmed on the TV to the “T-V LINK” compatible device, so that both the TV and the external device have the same channel settings. When connecting a new external device, channel information is loaded into it, allowing channel setup to be completed very quickly. For more details, refer to the external device’s manual.
- You can easily record the TV programme you are viewing on a “T-V LINK” compatible device by using the “DIRECT REC” feature. For more details, refer to the external device’s manual.

Connect “DVI” devices

Connect a “DVI” device to the HDMI connector using “DVI-HDMI” conversion cable. Connect analogue sound output of the DVI device to L and R terminals in EXT-3.

If you accidentally cut the power cord

Attach a new plug following the steps below. If in doubt, contact your local retailer.

Important

- Never connect to the larger terminal marked with an “E”, the safety earth symbol “ ⏚ ” or coloured green or green-and-yellow.
- The wires in the mains lead on this product are coloured with the following code:
  - Blue: Neutral wire (connect to the black terminal, or one marked “N”)
  - Brown: Live wire (connect to the red terminal, or one marked “L”)

Change the fuse in the plug

Open the plug as illustrated on the right.

- When replacing the fuse, always use a correctly rated and approved type and re-fit the fuse cover when finished.

If in doubt, contact your local retailer.

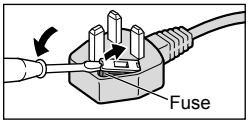

“CH/CC” List

To use the INSERT function (P. 11), find the “CH/CC” number corresponding to the TV’s Channel number from this table. If you want to know a particular TV channel's menu, look in TV listings magazines or contact the broadcaster.

- When the Country setting is “UNITED KINGDOM”, the CC number channels and channels from CH 02 to CH 12 cannot be received.

CH	Channel
CH 02	E2, IR A
CH 03	E3, IR B
CH 04	E4, IR C
CH 05	E5, IR D
CH 06	E6, IR E
CH 07	E7, IR F
CH 08	E8, IR G
CH 09	E9
CH 10	E10, IR H
CH 11	E11, IR J
CH 12	E12
CH 21	E21
CH 22	E22
CH 23	E23
CH 24	E24
CH 25	E25
CH 26	E26
CH 27	E27
CH 28	E28
CH 29	E29
CH 30	E30
CH 31	E31
CH 32	E32
CH 33	E33
CH 34	E34
CH 35	E35
CH 36	E36
CH 37	E37
CH 38	E38
CH 39	E39

CH	Channel
CH 40	E40
CH 41	E41
CH 42	E42
CH 43	E43
CH 44	E44
CH 45	E45
CH 46	E46
CH 47	E47
CH 48	E48
CH 49	E49
CH 50	E50
CH 51	E51
CH 52	E52
CH 53	E53
CH 54	E54
CH 55	E55
CH 56	E56
CH 57	E57
CH 58	E58
CH 59	E59
CH 60	E60
CH 61	E61
CH 62	E62
CH 63	E63
CH 64	E64
CH 65	E65
CH 66	E66
CH 67	E67
CH 68	E68
CH 69	E69

CC	Channel
CC 01	S1
CC 02	S2
CC 03	S3
CC 04	S4
CC 05	S5
CC 06	S6
CC 07	S7
CC 08	S8
CC 09	S9
CC 10	S10
CC 11	S11
CC 12	S12
CC 13	S13
CC 14	S14
CC 15	S15
CC 16	S16
CC 17	S17
CC 18	S18
CC 19	S19
CC 20	S20
CC 21	S21
CC 22	S22
CC 23	S23
CC 24	S24
CC 25	S25
CC 26	S26
CC 27	S27
CC 28	S28
CC 29	S29
CC 30	S30

CC	Channel
CC 31	S31
CC 32	S32
CC 33	S33
CC 34	S34
CC 35	S35
CC 36	S36
CC 37	S37
CC 38	S38
CC 39	S39
CC 40	S40
CC 41	S41
CC 75	X
CC 76	Y
CC 77	Z
CC 78	Z+1
CC 79	Z+2

Specifications

Main unit

Model	LT-32A70BJ/SJ	LT-26A70BJ/SJ
Broadcasting systems	CCIR I	
Colour systems	TV broadcast: PAL External input: PAL, NTSC 3.58/4.43 MHz	
Channels and frequencies	UNITED KINGDOM: E21-E69 (UHF) IRELAND: IR A-IR J, E2-E12, E21-E69 (VHF/UHF)	
Sound-multiplex systems	NICAM (I)	
Teletext systems	FLOF (Fastext), WST (standard system)	
Power requirements	AC 220 V - 240 V, 50 Hz	
Audio output (Rated power output)	5 W + 5 W	
Speakers	(12 cm x 5 cm) x 2	
Power consumption [standby]	114 W [0.7 W]	106 W [0.7 W]
Screen size (visible area size measured diagonally)	80 cm	66 cm
Dimensions (W x H x D: mm) [without stand]	820 x 588 x 244 [820 x 551 x 126.8]	686 x 514 x 244 [686 x 474 x 121.5]
Weights [without stand]	14.6 kg [12.6 kg]	11.6 kg [9.6 kg]
Accessories	(See “Check accessories”, P. 5)	

Terminals / Connectors

Terminal name		Terminal type	Signal type (IN)	Signal type (OUT)	Notes
Input / Output terminals	EXT-1	Euroconnector x 1 (SCART connector)	Composite video, Analogue RGB Audio L / R	TV out	
	EXT-2	Euroconnector x 1 (SCART connector)	Composite video, S-Video, Analogue RGB Audio L / R	Dubbing out	“T-V LINK” compatible
Input terminals	EXT-3	RCA connectors x 3	Composite video Audio L / R		
	EXT-4	RCA connectors x 3	Analogue component (576i (625i) / 480i (525i), Progressive: 576p (625p) / 480p (525p), HD: 1080i (1125i), 720p (750p))		Common Audio L/R with EXT-3
	HDMI	HDMI connector x 1	HDMI (576i (625i) / 480i (525i) / 576p (625p) / 480p (525p), 1080i (1125i), 720p (750p))		Analog audio input for DVI via EXT-3
Output terminals	Headphone	Stereo mini-jack x 1 (3.5 mm in diameter)		Headphone output	

● We may change the design and specifications without notice.

For users in the UK :
If you have any problems setting up your new TV, please call the JVC Helpline on **0870 330 5000.**

For users in the Republic of Ireland :
If you have any problems setting up your new TV, please call the JVC Helpline on **1890-582500.**

© 2006 Victor Company of Japan, Limited

1006KTH-SW-MU

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages